

TheDecalMan.co.uk

Car Decals, Signs, Mugs, T-shirts & More

Before we begin with this install it may help you to watch our correx install video so you can see how to fit the vinyl graphics as pictures don't really show you how to do it.

We don't actually own an A-frame so we have scaled down the install process to A4. Having installed lots of these to the A2 and A1 A-frames it is exactly the same process.

Firstly remove the clear plastic and laminate from your A-frame and lay flat.


Take the Clear plastic and turn over so the smooth surface is face up.
You can feel a slightly rough surface on one side which is the outward facing side (hard wearing)



Make sure the clear layer is completely clean from dirt and grime using a fairy liquid and water wash.

Also ensure it is completely dry before application.

Now place your laminate underneath the clear plastic ensuring its aligned correctly.

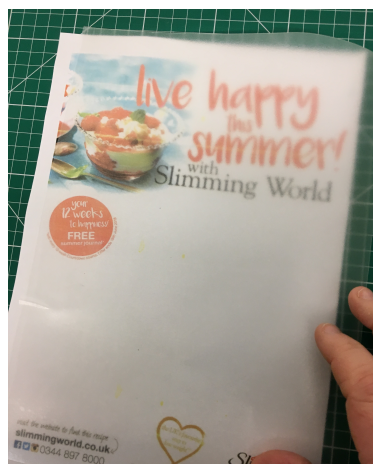

You will use this as a guide to where your decals will be going.

Place your decals over the top of the clear plastic and get it into the position and secure as best you can.

You might think the decals are the wrong way but this is not the case as you will see.



Now peel back the clear layer of the decal halfway making sure the details have stayed on the clear tape and not stuck to the wax paper.

If any details stay on the wax paper rub the clear layer tape with a card or firm pressure to make the decals stick to the tape.


You can cut half of the wax paper away as you go and then lower the decals into place keeping the clear tape as tight as you can to avoid bubbles and smooth onto the clear plastic with a firm pressure to remove any bubbles.

Now take the opposite end and peel back the clear tape to the point where you can remove the remaining wax paper and smooth down onto the clear laminate in the same way.



You will now be left with the clear application tape and decals stuck onto the clear plastic.

Now simply peel away the clear tape from the decal slowly and at a 45 degree angle pulling downwards not lifting upwards as this will just pull the decals off of the clear plastic.

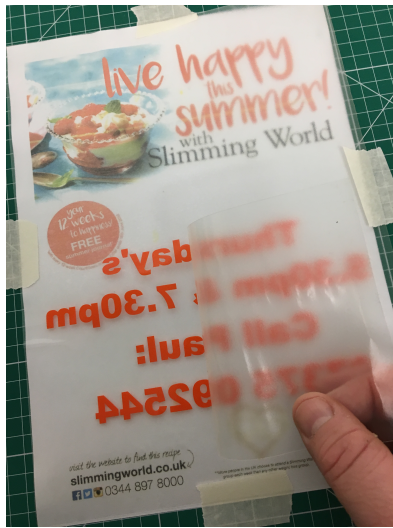

That's it you have completed one side of your a-frame just one more to go.
 Turn over the clear plastic and you will see the details are the right way around and your nice shiny new decal are protected from the weather as they are inside the plastic not on the outside.



The great point of this is simple just remove your old laminates and put in your new ones and the clear plastic has all your details ready to go so no more writing on your laminates.